SONY

3-246-673-**41** (1)

TV/WB/FM/AM Portable CD Player

Operating Instructions

COMPACT DISC DIGITAL AUDIO

WALKMAN

D-FJ787

©2003 Sony Corporation Printed in Malaysia

eco info

Printed on 100 % recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

http://www.sony.net/

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products. WALKMAN is a trademark of Sony Corporation.

CD player (front)

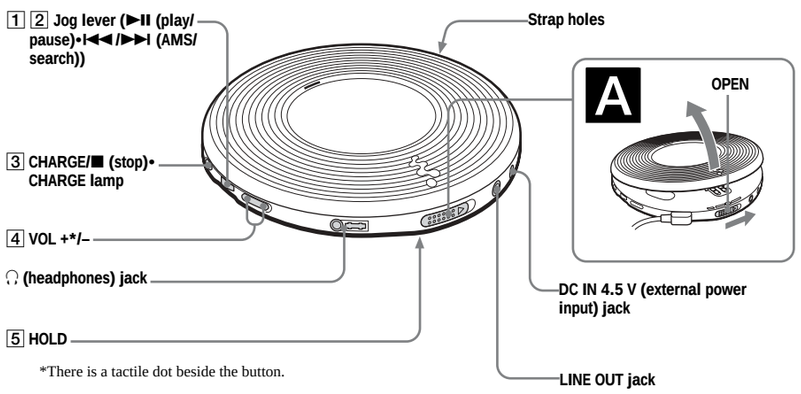

*There is a tactile dot beside the button.

CD player (inside)

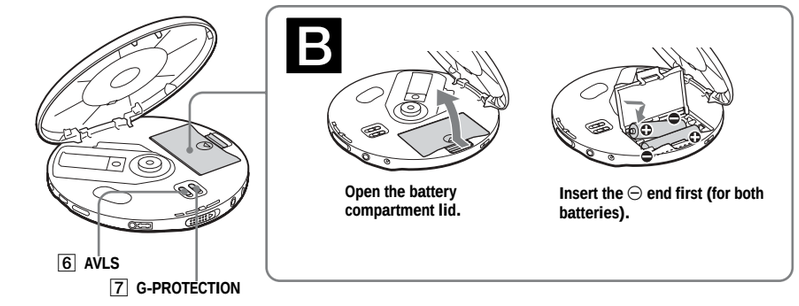

Remote control

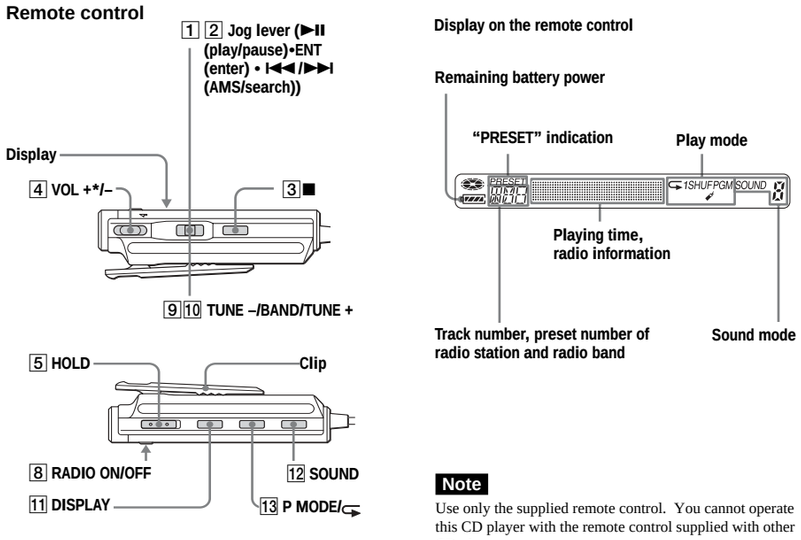

*There is a tactile dot beside the button.

Display on the remote control

Note

Use only the supplied remote control. You cannot operate this CD player with the remote control supplied with other CD players.

C

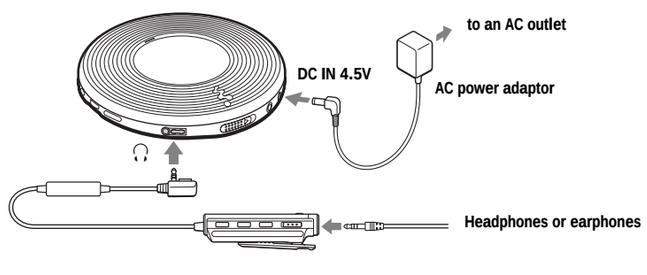

D

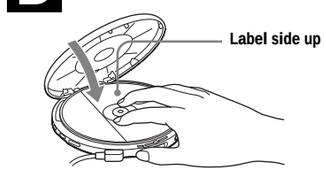

E

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT

For the customers in the USA

RECYCLING NICKEL METAL HYDRIDE BATTERIES

Nickel Metal Hydride batteries are recyclable.
You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.
For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit **http://www.rbrc.org/**.
Caution: Do not handle damaged or leaking Nickel Metal Hydride batteries.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Owner's Record

The model number and the serial number are located at the rear of the CD player. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.
Model No. D-FJ787
Serial No. _____

For the customers in the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If you have any questions about this product, you may call:
Sony Direct Response Center 1-(800)-222-7669
or write to:
Sony Direct Response Center 12451 Gateway Blvd. Fort Myers, FL 33913

Declaration of Conformity

Trade Name:	SONY
Model No.:	D-FJ787
Responsible Party:	Sony Electronics Inc.
Address:	680 Kinderkamack Road, Oradell, NJ 07649 USA
Telephone No.:	201-930-6972

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product registration

For the customers in the USA

Please register this product on line at www.sony.com/productregistration.
<http://www.sony.com/productregistration>

Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

Power Sources

To use the AC power adaptor (C)

1 Connect the AC power adaptor to an AC outlet.

To use the batteries (B)

Use only the following batteries for your CD player:

Rechargeable batteries

Charge the rechargeable batteries before using them for the first time.
- NH-7WMAA (supplied)
- NH-WM2AA (NH-WMAA × 2) (not supplied)

Dry batteries

- LR6 (size AA) alkaline batteries

To insert the batteries

1 Open the battery compartment lid inside your CD player.
2 Insert the ⊖ end of two batteries, then matching the ⊕ to the diagram in the battery compartment insert the other end. Then, close the lid until it clicks into place.
3 When using the rechargeable batteries, connect the AC power adaptor to the DC IN 4.5 V jack of your CD player and an AC outlet, then press CHARGE/■ to start charging.
The CD player charges the batteries. In the display on the remote control, "Charging" flashes and the indicator sections of ▭ light up in succession.
The CHARGE lamp on the CD player turns on. When the batteries are completely charged, the CHARGE lamp and ▭ indicator get turned off.
If you press CHARGE/■ after the charge has already been completed, the ▭ indicator flashes and "FULL" appears in the display.
4 Disconnect the AC power adaptor.

Battery life* (approx. hours)

(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.

	G-PROTECTION on	G-PROTECTION off	RADIO ON
Two NH-7WMAA (charged for about 2 hours**)	15	10	8
NH-WM2AA (charged for about 4 hours**)	32	24	16
Two Sony alkaline batteries LR6 (SG) (produced in Japan)	50	35	20

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).
** Charging time varies depending on how the rechargeable battery is used.

To check the remaining power of the batteries (only when playing a CD)

You can check it in the display.
Replace the batteries when "▭" flashes.

▭ → ▭ → ▭ → ▭ → ▭ → Lobatt*

* Beep sounds.

Notes

- The indicator sections of ▭ roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of ▭ may increase or decrease.
- When listening to the radio, the remaining power of the batteries is not displayed.

When to replace the rechargeable batteries

If the battery life becomes shorter by about half, replace the batteries with new rechargeable batteries.

Notes on the rechargeable batteries

- To keep the original battery capacity for a long time, charge the batteries only when they are completely depleted.
- If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.
- When carrying the rechargeable batteries, use the supplied battery carrying case to prevent unexpected heat. If the rechargeable batteries and the metallic objects get contacted, heat or fire may occur due to a short circuit.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

CD Player

Playing a CD

To insert a CD

1 Slide OPEN to open the lid (A).
2 Fit the CD to the pivot, then close the lid (D).

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
- This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

Button/Switch	Function/Operation
1 Jog lever ▶II (play/pause)	Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped.
2 Jog lever I◀◀ /▶▶I (AMS*1/search)	Flick toward I◀◀ or ▶▶I once to find the beginning of the current/next track. Flick toward I◀◀ or ▶▶I repeatedly to find the beginning of the previous/succeeding tracks. Hold toward I◀◀ or ▶▶I to go backward/forward quickly.
3 CHARGE/■ (■) (stop)	Press to stop playing.
4 VOL+/–	Press to adjust the volume.
5 HOLD	Use to lock the controls on your CD player or remote control to prevent accidental button presses. HOLD on the CD player works only for the player, while HOLD on the remote control works only for the remote control. The CHARGE lamp flashes if you press any button when the HOLD function is activated.
6 AVLS*2	Set to "LIMIT" when you want to keep down the maximum volume to protect your hearing.
7 G-PROTECTION	Protect against sound skipping.*3
8 RADIO ON/OFF	Press to turn on/off the radio.
9 Jog lever BAND	Press to change the band.
10 Jog lever TUNE –/+	When listening to the radio, press to tune in to the station you want. Also press to select the preset station you want.
11 DISPLAY	Press to display the remaining time/tracks. For radio: Press and hold to set the radio to the automatic presetting mode, etc.
12 SOUND	Use to emphasize bass-boosted sound. Press repeatedly to select SOUND 1 or SOUND 2. SOUND 2 enhances bass more than SOUND 1.*4 For radio: Press to switch between "Stereo" and "Mono".
13 P MODE/ (play mode/repeat)	Press repeatedly until the play mode you want appears in the display. No indication: Normal play "1": Single play "SHUF": Shuffle play "♪": Bookmarked track play "PGM": PGM (program) play To repeat the play mode you selected, press and hold until "" appears. For radio: Press to switch between the tuning mode and the preset mode.

*1 AMS = Automatic Music Sensor
*2 AVLS = Automatic Volume Limiter System
The AVLS function does not work when listening to the radio.
*3 Sound may skip:
– if the CD player receives stronger continuous shock than expected,
– if a dirty or scratched CD is played or
– when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.
*4 If the sound is distorted when using the SOUND function, turn down the volume.
The SOUND function does not work when listening to the radio.

To remove the CD

Remove the CD while pressing the pivot (E).

To turn off the operation beep sound

You can turn off the beep sound that is heard from your headphones/earphones when you operate your CD player. When listening to the radio, you cannot turn off the beep sound for the radio.

1 Remove the power source (AC power adaptor, rechargeable batteries or dry batteries) from the CD player.
2 Connect the power source while pressing CHARGE/■ on the CD player or ■ on the remote control.

To turn on the beep sound

Remove the power source and then connect the power source without pressing CHARGE/■ or ■.

Playing your favorite tracks by adding Bookmarks (Bookmarked track play)

You can add Bookmarks to up to 99 tracks for each CD. You can use this function for up to 10 CDs.

To add Bookmarks

1 During playback of the track where you want to add a Bookmark, press and hold the jog lever until "♪ (Bookmark)" flashes in the display.
When the Bookmark has been added successfully, flashing of "♪" becomes slow.
2 Repeat step 1 to add Bookmarks to the tracks you want.

To listen to the tracks with Bookmarks

1 Press P MODE/ repeatedly until "♪" flashes.
2 Press the jog lever.
"♪" lights up in the display and the playback of the tracks with Bookmarks starts.

To remove the Bookmarks

During playback of the track with a Bookmark, press and hold the jog lever until "♪" disappears from the display.

To check the tracks with Bookmarks

During playback of the tracks with Bookmarks, "♪" keeps flashing slowly in the display.

Notes

- During playback of the tracks with Bookmarks, tracks are played in order of track number, and not in the order you added the Bookmarks.
- If you try to add Bookmarks to the tracks on the 11th CD, the Bookmarks of the CD you played back first will be erased.
- If you remove all power sources, all Bookmarks stored in memory will be erased.
- If you continue playing the CD player on the rechargeable batteries without charging the batteries even though "Lobatt" is displayed, all Bookmarks stored in memory will be erased.

Playing tracks in your favorite order (PGM play)

You can program the CD player to play up to 64 tracks in your favorite order.

1 During playback, press P MODE/ repeatedly until "PGM" appears.
2 Flick the jog lever toward I◀◀ or ▶▶I to select a track.
3 Press the jog lever to enter the selected track.
"000" appears and the playing order increases by one.
4 Repeat steps 2 and 3 to select the tracks in your favorite order.
5 Press and hold the jog lever until the PGM play starts.

To check the program

During programming:
Press the jog lever repeatedly before step 5.
During the PGM play:
Press P MODE/ repeatedly until "PGM" flashes, then press the jog lever repeatedly.
Each time you press the jog lever, the track number appears.

Notes

- When you finish entering the 64th track in step 3, the first selected track appears in the display.
- If you select more than 64 tracks, the first selected tracks are erased.

F

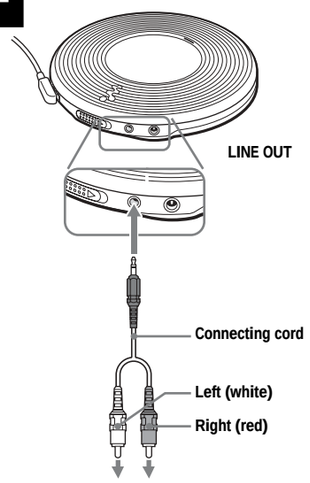

Using the radio

Using the remote control, you can enjoy TV, WB (Weather band), FM and AM programs by presetting the stations or by tuning in to the stations manually.
You can preset automatically scanned stations or select your favorite stations manually.

Listening to the radio

1 Press RADIO ON/OFF to turn on the radio.

If "PRESET" is displayed, press P MODE/↻ to make it disappear from the display.

2 Press the jog lever of the remote control until the radio band you want appears.

Each time you press the button, the display on the remote control changes as follows:

→ FM → AM → TV → WB ┐

3 Flick the jog lever of the remote control toward TUNE + or TUNE – to tune in the station you want and adjust the volume.

To turn off the radio

Press RADIO ON/OFF again.

To tune in to a station quickly

Flick and hold the jog lever toward TUNE + or TUNE – in step 3 until the frequency digits begin to change in the display. The CD player automatically scans the radio frequencies and stops when it finds a clear station.

To improve broadcast reception

For TV/WB/FM, extend the headphones or earphones cord.

Headphones or earphones



For AM, reorient the remote control itself.



Note

There is a DC-DC converter attached to the headphones/earphones cord.



When listening to an AM program, keep the remote control away from the DC-DC converter, otherwise, noise may be heard.

If it is hard to hear an FM broadcast

Press SOUND repeatedly until "Local" appears in the display.
Under the normal conditions, press SOUND repeatedly until "DX" appears in the display.

Presetting radio stations

You can preset up to 51 stations: 30 for FM, 10 for AM, 7 for TV, and 4 for WB.

Presetting stations manually

1 Press RADIO ON/OFF to turn on the radio.

2 Press the jog lever to select a radio band.

3 Flick the jog lever toward TUNE + or TUNE – to tune in to the station you want.

4 Hold down the jog lever for 2 seconds or more until "PRESET" appears in the display.
The preset number and "M" flash in the display.

From this step on, start the next operation within 15 seconds after you finished the previous operation. If 15 seconds pass with nothing done, "PRESET" and the preset number disappear which shows that the CD player has exited the presetting mode. If this happens, start again from step 4.

5 Flick toward TUNE + or TUNE – repeatedly to select the preset number you want to use to store the station.

6 Press the jog lever.

When the station is preset successfully, a beep sounds and "PRESET" and the preset number disappear from the display. If there is a station already stored using that number, the new station replaces the old one.

Presetting stations automatically

1 Press RADIO ON/OFF to turn on the radio.

2 Press the jog lever to select a radio band.

3 Hold down DISPLAY until "A Preset" appears in the display.

4 Press the jog lever.

The CD player starts scanning the stations from the lower frequencies and stops when a station is received.
While scanning, "A" flashes in the display.

When all the receivable stations are preset, a beep sounds and "A" stops flashing,

To stop scanning

Press RADIO ON/OFF or press ■ on the remote control. The radio is turned off at that time.

Playing preset radio stations

1 Press RADIO ON/OFF to turn on the radio.

2 Press the jog lever of the remote control to select a radio band.

3 Press P MODE/↻ to switch your CD player to the presetting mode.

4 Flick the jog lever toward TUNE + or TUNE – to tune in to the stored station you want to listen to.

If you press P MODE/↻ again, "PRESET" disappears from the display and you can tune in to a station manually.

Changing the tuning interval

When using the CD player abroad, change the AM tuning interval, if necessary.

1 Press RADIO ON/OFF to turn on the radio.

2 Hold down DISPLAY until "A Preset" appears in the display.

3 Flick the jog lever toward TUNE + or TUNE – repeatedly until "Step" appears in the display.

4 Press the jog lever.
"Step 9k" or "Step 10k" appears in the display.

5 Flick the jog lever toward TUNE + or TUNE – to select the tuning interval.

9 kHz area: Asia and Europe
10 kHz area: the U.S.A., Canada and South America

Note

After changing the tuning interval, you need to preset radio stations again.

Connecting a stereo system (F)

You can listen to CDs through a stereo system and record CDs on a cassette tape. For details, see the instruction manual that comes with the connected device.
Be sure to turn off all connected devices before making connections.

Notes

- Before you play a CD, turn down the volume of the connected device to avoid damaging the connected speakers.
- Use the AC power adaptor for recording. If you use the rechargeable batteries or dry batteries as a power source, batteries may become completely depleted during recording.
- Adjust the volume properly on the connected device so that the sound will not be distorted.
- When the CD player is connected to a stereo system, you cannot listen to the radio.

When using the connecting cord

If the sound is distorted, connect the device to the 🎧 jack.

About the G-PROTECTION and SOUND functions when using the connecting cord

- To record high quality CD sound, set the G-PROTECTION switch to "OFF."
- The SOUND function works only on the output sound from the 🎧 jack and not work on the output sound from the LINE OUT jack.

Precautions

On safety

- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

On power sources

- When you are not using the CD player for a long time, disconnect all power sources from the CD player.

On AC power adaptor

- Use only the AC power adaptor supplied. If your CD player is not supplied with the one, use the AC-E45HG AC power adaptor. Do not use any other AC power adaptor. It may cause a malfunction.

Polarity of the plug

- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.

On rechargeable batteries and dry batteries

- Do not charge the dry batteries.
- Do not throw the batteries into fire.
- Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.
- Do not mix rechargeable batteries with dry batteries.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit in the battery compartment, and install new batteries. In case the deposit adheres to you, wash it off thoroughly.

On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.
- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unleveled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzine or thinner.

To clean the plugs

If the plugs become dirty, there is no audio or noise is heard. Clean them with a dry soft cloth periodically.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

CHARGE lamp flashes on the CD player when you press a button, and the CD does not play.

→ The buttons are locked. Slide HOLD back.

The CD player does not start charging.

→ During stop, press CHARGE/■.
→ You press ■ on the remote control. Press CHARGE/■ on the CD player.
→ The radio is turned on.

You cannot preset stations automatically.

→ Preset stations manually.

The volume does not increase even if you press VOL + repeatedly.

→ Set AVLS to "NORM."

The battery compartment lid is dettached by an accidental drop, excessive force, etc.

→ Attach it as illustrated below.

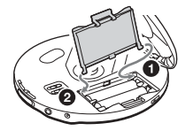

Specifications

CD player

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs
Wavelength: λ = 780 nm
Emission duration: Continuous
Laser output: Less than 44.6 µW (This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Radio

Frequency range

10 kHz step:
TV: 2 - 13 ch
WB (weather band): 1 - 7 ch
FM: 87.5 - 108.0 MHz
AM: 530 - 1 710 kHz
9 kHz step:
TV: 2 - 13 ch
WB (weather band): 1 - 7 ch
FM: 87.5 - 108.0 MHz
AM: 531 - 1 710 kHz

Antenna

TV/WB/FM: Headphones/earphones cord antenna
AM: Ferrite bar antenna built in the remote control

General

Power requirements

For the area code of the model you purchased, check the upper left side of the bar code on the package.
- Two Sony NH-7WMAA rechargeable batteries: 1.2 V DC × 2
- Sony NH-WM2AA rechargeable batteries: 1.2 V DC × 2
- Two LR6 (size AA) batteries: 1.5 V DC × 2
- AC power adaptor (DC IN 4.5 V jack):
  U, U2, CA, CA2, E92, MX2, TW2 and CA2/C models: 120 V, 60 Hz
  CED, CED/4, CE7, CE7/C, EE, EE1, E, E13 and E13/2 models: 220 - 230 V, 50/60 Hz
  CEK model: 230 V, 50 Hz
  AU2 model: 240 V, 50 Hz
  EU8, EU8/C, JE.W, E18, KR4 and EE8 models: 100 - 240 V, 50/60 Hz
  HK4 model: 230 V, 50 Hz
  CNA model: 220 V, 50 Hz

Dimensions (w/h/d) (without projecting parts and controls)

Approx. 136.0 × 19.6 × 136.0 mm (5 3/8 × 25/32 × 5 3/8 in.)

Mass (excluding accessories)

Approx. 158 g (5.6 oz)

Operating temperature

5°C - 35°C (41°F - 95°F)

Design and specifications are subject to change without notice.

Supplied Accessories

AC power adaptor (1)
Headphones/earphones (1)
Remote control with built-in tuner (1)
Rechargeable batteries (2)
Battery carrying case (1)
Carrying pouch (1)

This warranty is valid only in the United States.

SONY®

LIMITED WARRANTY

Portable Audio

Sony Electronics Inc. ("Sony") warrants this Product (including any accessories) against defects in material or workmanship as follows:

1. LABOR: For a period of 90 days from the date of purchase, if this Product is determined to be defective, Sony will repair or replace the Product, at its option, at no charge, or pay the labor charges to any Sony authorized service facility. After the Warranty Period, you must pay for all labor charges.

2. PARTS: In addition, Sony will supply, at no charge, new or rebuilt replacements in exchange for defective parts for a period of one (1) year. After 90 days from the date of purchase, labor for removal and installation is available from Sony authorized service facilities or a Sony Service Center at your expense.

To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any authorized Sony service facility.

This warranty does not cover customer instruction, installation, set up adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in the United States.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For your convenience, Sony Electronics Inc. has established telephone numbers for frequently asked questions:

To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, call:

Sony Direct Response Center
1-(800)-222-7669
or write to:
Sony Direct Response Center
12451 Gateway Blvd.
Fort Myers, FL 33913

For an accessory or part not available from your authorized dealer, call:

1-(800)-488-SONY (7669)

W 455714701 (T1)